



### 1.GAS INJECTION

To refill the gas with the gas container in vertical position.

### CHARGING GAS

Charge magazine until gas overflows from charging valve.(approximately 5-10 seconds)

### 2.SHOOTING PROCESS

After a long and continued firing practice,the low temperature of the magazine will cause a reduced gas pressure as well as the low velocity of bullet.it is a normal condition,not a trouble.

### WARNING!

- Check canister for any cracks or leaks before using
- Do not expose canister to temperature over 40
- Do not leave canister directly over fire
- Do not boil canister
- Keep canister away from direct sunlight
- Do not leave canisters in vehicles

**NOTES:** It is normal that you may experience minor leaking from charging valve during charging,due to high pressure built up inside magazine.it is recommended to keep gas release valve slightly oiled. Ideal temperature for shooting is room temperature.

**CAUTIONS:** You may experience a delay action if surrounding temperature down below 68'f,remember,do not expose magazine directly under the sun or incinerate the magazine,it may cause bursting.it is strongly recommended to empty gas skin when gas is being released,it may cause frostbite.

# WWII01

MAUSER KAR 98K MODELS



[DoubleBellAirsoft.com](http://DoubleBellAirsoft.com)