



MAGAZINE DIAGRAM AND PARTS LIST

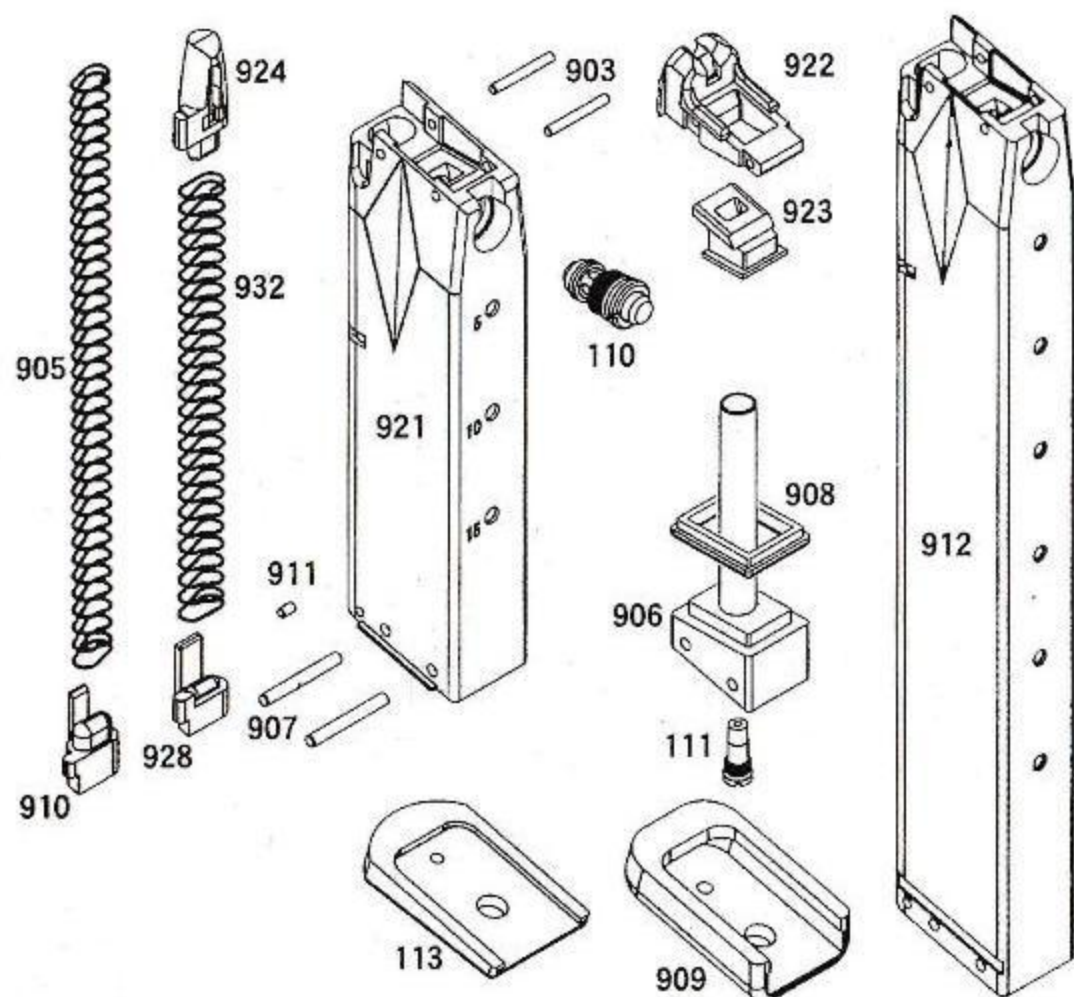

Parts #	Description	Parts #	Description
199-0001-110	Magazine Gas Release Valve	199-0001-910	Magazine Base Plate Lock "Hi-Cap"
199-0001-111	Magazine Charging Valve	199-0001-911	Magazine Base Plate Lock Pin
199-0001-113	Magazine Base Plate STND	199-0001-912	Magazine Body "Hi-Cap"
199-0001-903	Magazine Lip Pins X2	199-0001-921	Magazine Body Standard
199-0001-905	Magazine Follower "Hi-Cap"	199-0001-922	Magazine Lip
199-0001-906	Magazine Base	199-0001-923	Magazine Lip Nozzle Seal
199-0001-907	Magazine Base Pins X2	199-0001-924	Magazine Follower
199-0001-908	Magazine Base Seal	199-0001-928	Magazine Base Plate Lock
199-0001-909	Magazine Base Plate "Hi-Cap"	199-0001-932	Magazine Follower Spring

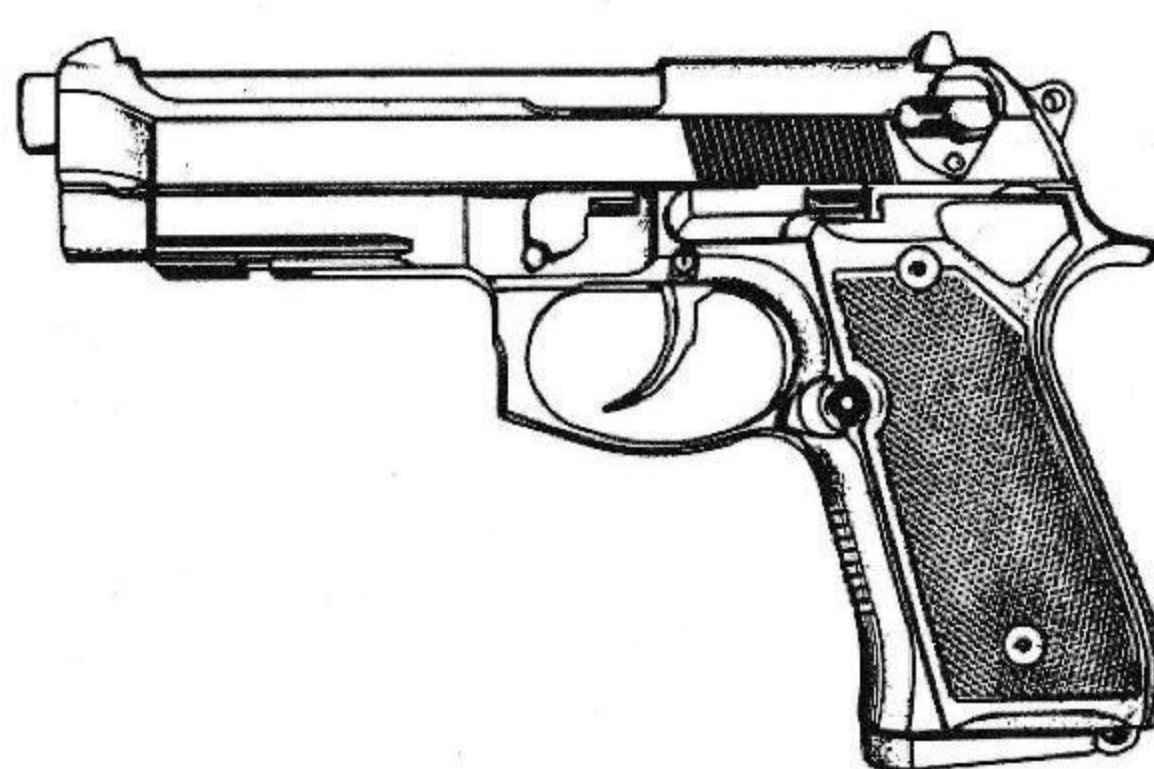

M9 PTP SERIES

M9 PTP SERIES


CHARGING GAS

1. Release the magazine by pressing the magazine release button.
2. Push the gas canister nozzle into the charging valve. Make sure the canister is in a vertical position when charging.
3. Charge the magazine until gas overflows from the charging valve.

WARNING: Sudden impact with a hard surface may cause damage to the magazine.

Note: It is normal to have minor leaking from the charging valve during charging due to high pressure built up inside the magazine. It is recommended to keep the gas release valve slightly oiled. Room temperature is the ideal temperature for shooting. You may experience a delayed action if the surrounding temperature drops below 68° F.

Note: Do not expose the magazine to direct sunlight or incinerate the magazine, as this may cause the magazine to burst. It is strongly recommended to empty the gas from the magazine after shooting. Be certain that the gas does not make contact with eyes or skin while being released, as any contact will cause cold burns.

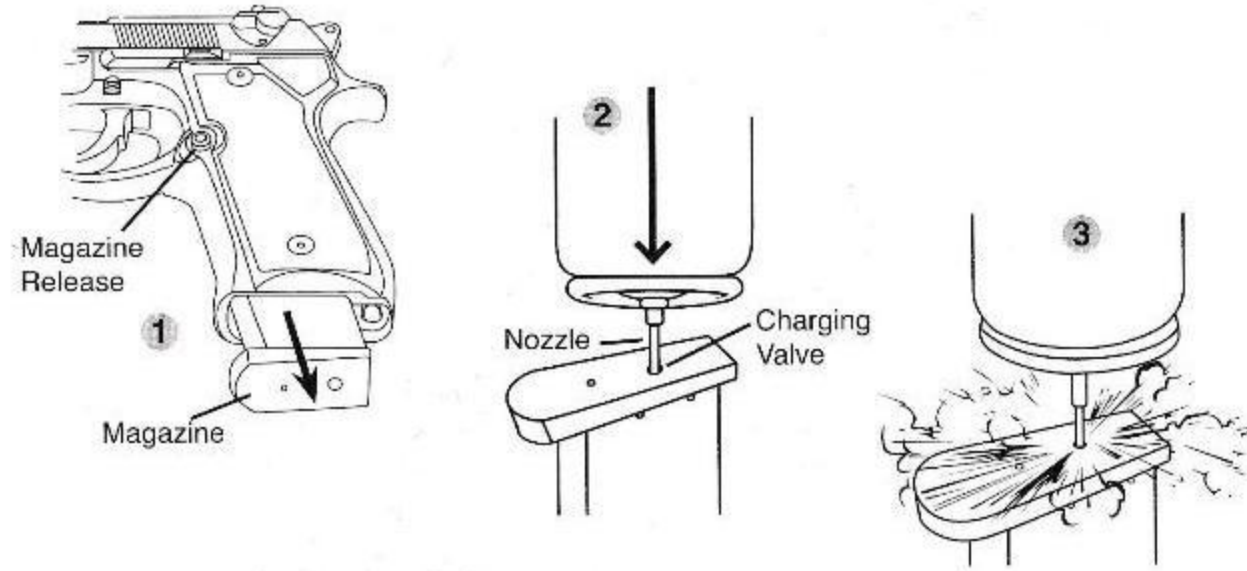


Green Gas safety tips:

- Check the canister for any cracks or leaks before using.
- Do not expose the canister to temperature over 104° F.
- Do not leave the canister directly over fire.
- Do not heat the canister.
- Keep the canister away from direct sunlight.
- Do not leave the canister in any type of vehicle.

1


DOUBLE BELL

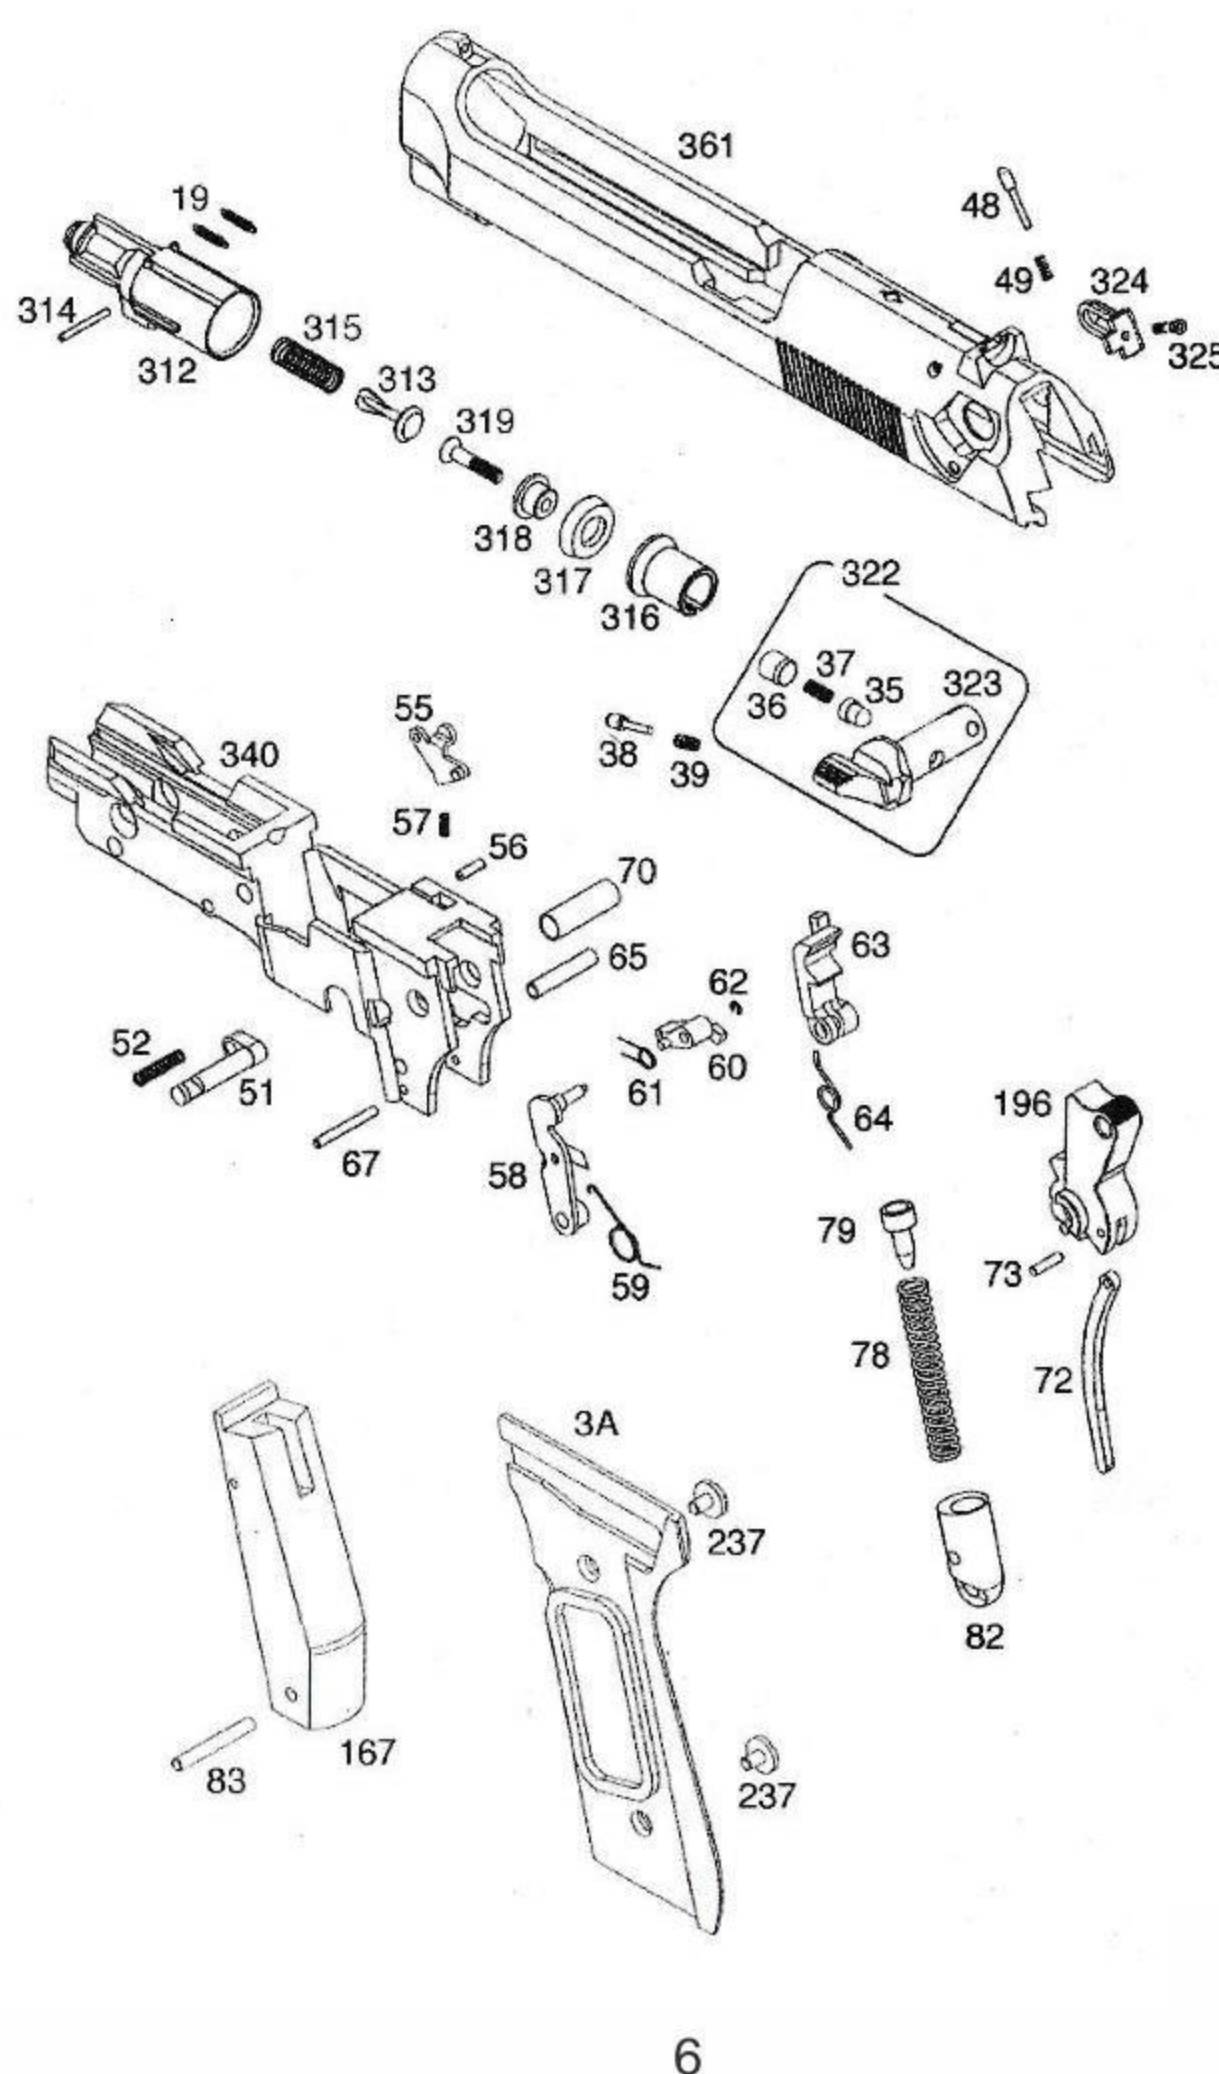

6

M9 PTP SERIES

DIAGRAM

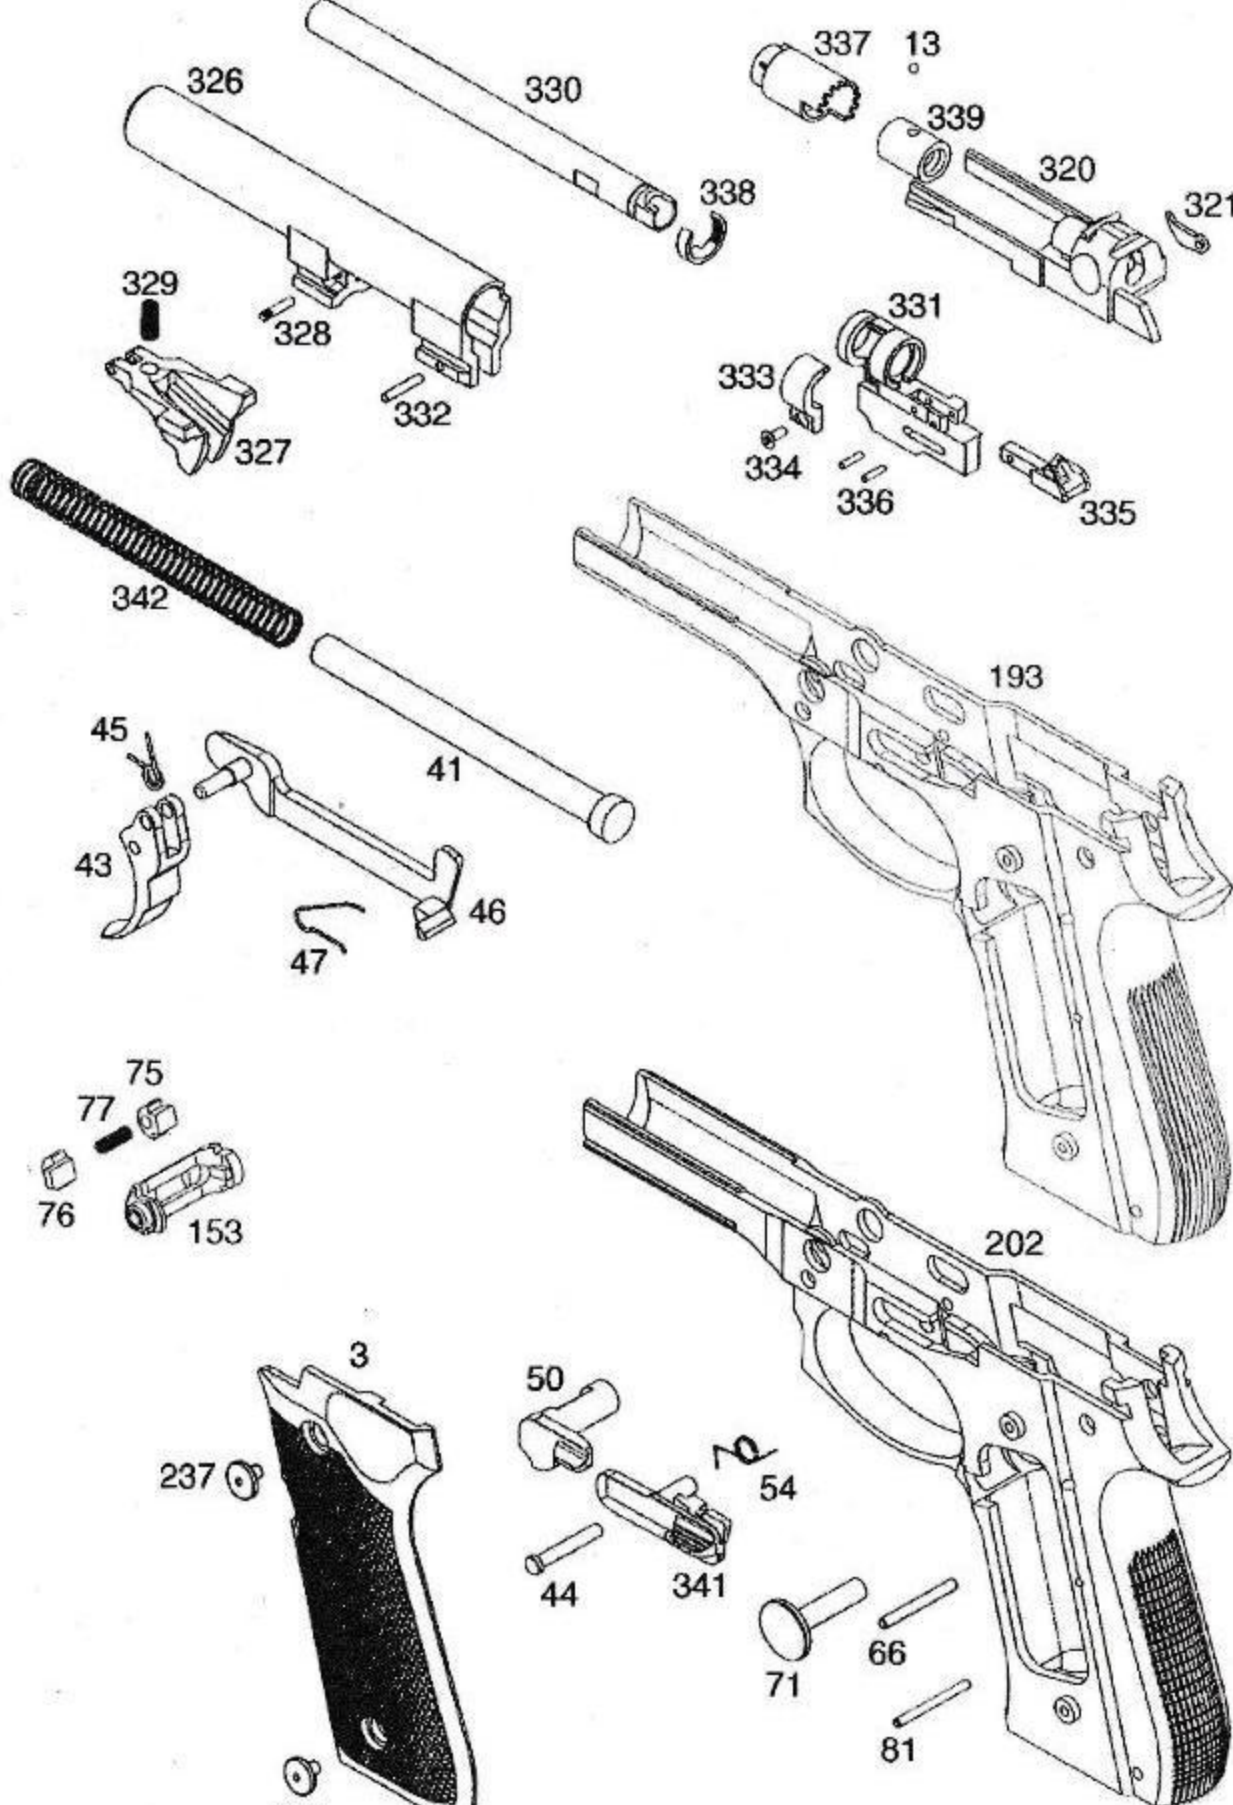

5


DOUBLE BELL

LOADING BBs

1. Pull the magazine follower down until it locks.
2. Insert BBs into the magazine lip.
3. BBs should stack staggered for maximum round capacity: 48 rounds.
4. Make sure to have a 3mm clearance between BBs and the top lip of the magazine.
5. Push the magazine follower lock to release.

Note: Always use KWA Perfect BBs, size 0.2 or 0.25g. Using only KWA Perfect BBs can give your Airsoft gun its best performance. Using recycled and low grade BBs may damage the gun.

WARNING: Do not release the magazine follower when the magazine is empty. Doing so will damage the magazine and magazine follower.

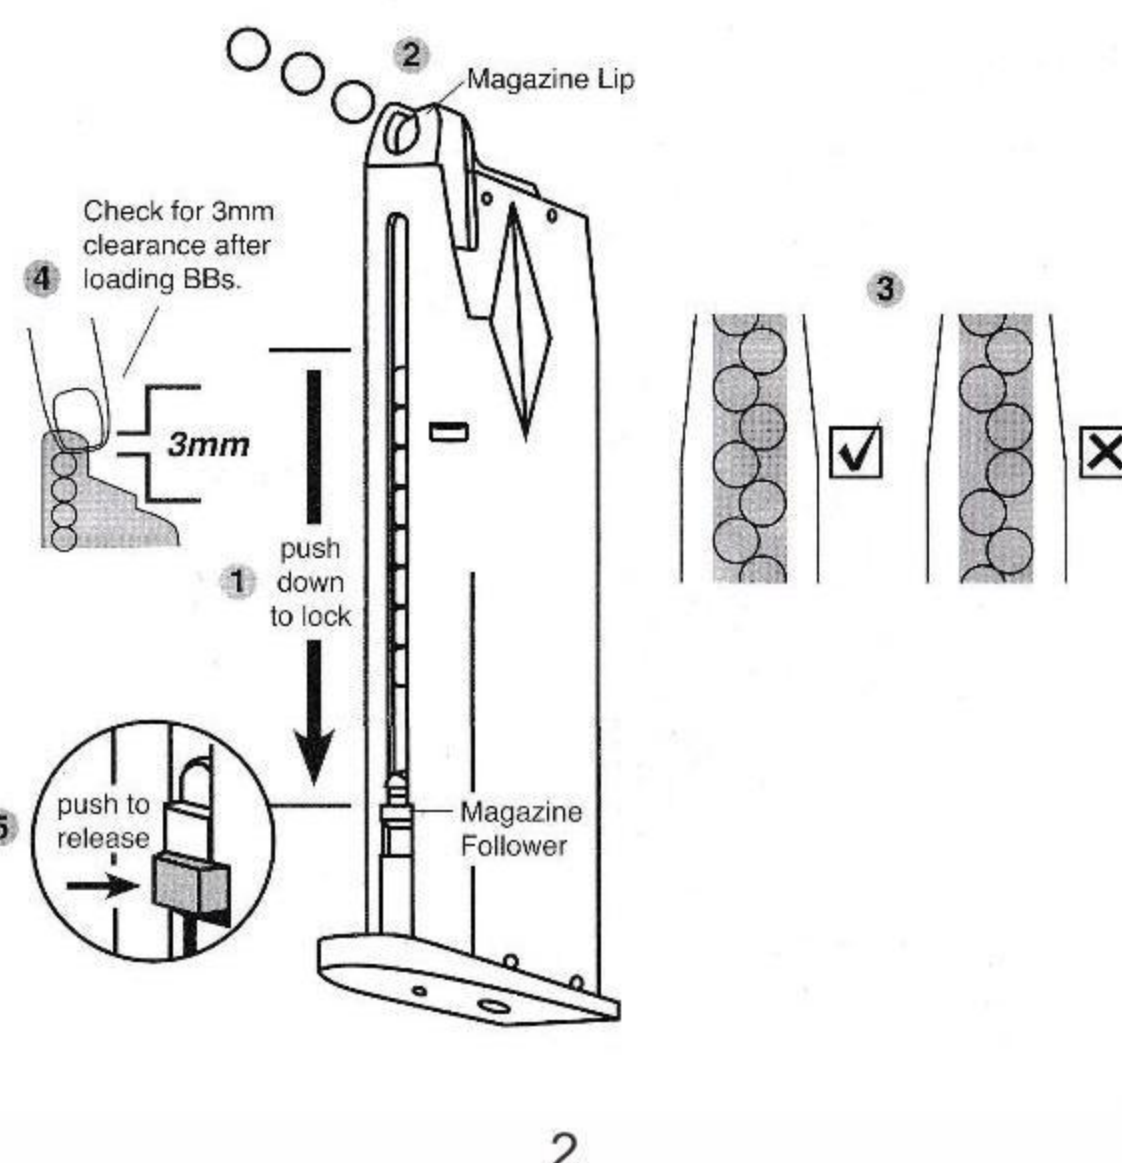


2

M9 PTP SERIES

LOADING MAGAZINE

1. Place the magazine back into the magazine well.
2. Push the magazine up until it clicks into a locked position.
3. Pull the magazine down to assure that it has been locked in place.

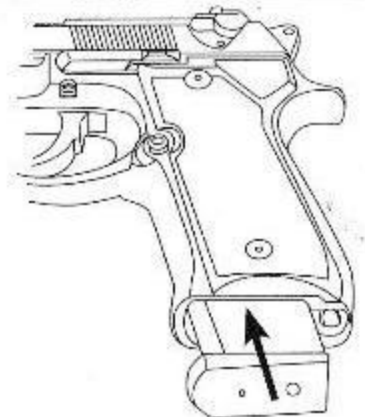


COCKING

Pull the slide to the rear-most position and release the slide. This will automatically load the BBs into the chamber. The hammer will be in a cocked position. Make sure not to skip this procedure. Skipping this step will cause a misfire on the first pull of the trigger. The slide will stay open when the last BB is fired and ejected.



SHOOTING

1. Release the safety and pull the trigger. The blow-back action will load the BBs automatically as the slide cycles back and forth.
2. Grasp the Airsoft gun firmly in your hand. To properly control the gun, grasp it with a two-hand hold with one hand wrapped around the other.

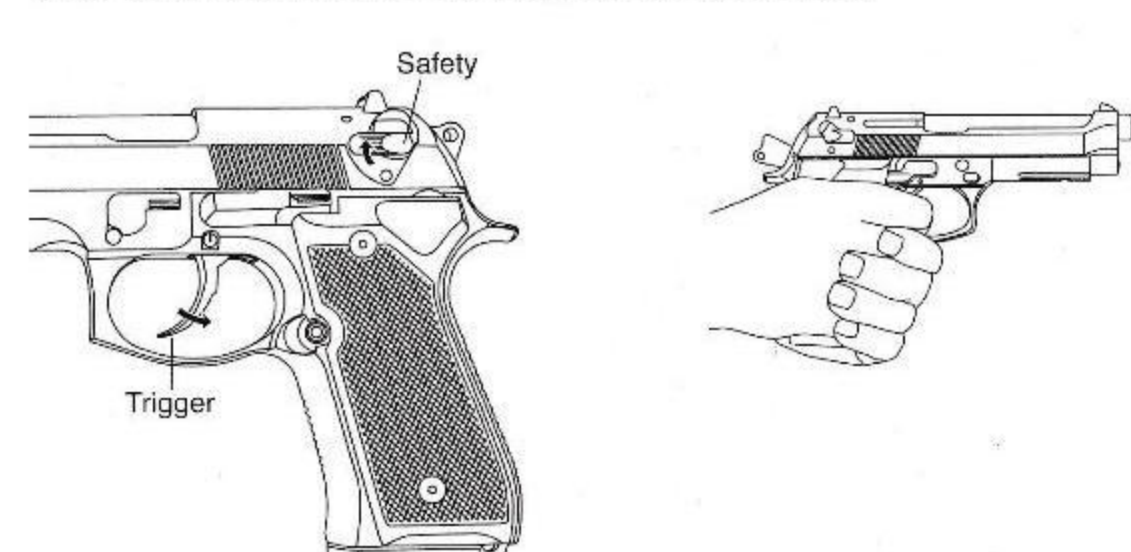

WARNING: Never shoot gun in a horizontal or upside-down position.


3

DOUBLE BELL

DISASSEMBLY


It is not recommended to disassemble the gun unless for general maintenance, or to clear BBs jammed inside the barrel.

1. Remove the magazine
2. Check and clear the chamber of BBs
3. Pull the slide to the rear by 1/4 inch and push disassembly pin inward and hold.
4. Push the disassembly lever downward and release the disassembly pin.
5. Pull the slide forward away from the frame
6. Remove the guide rod and spring
7. Slide the barrel out from the bottom of slide

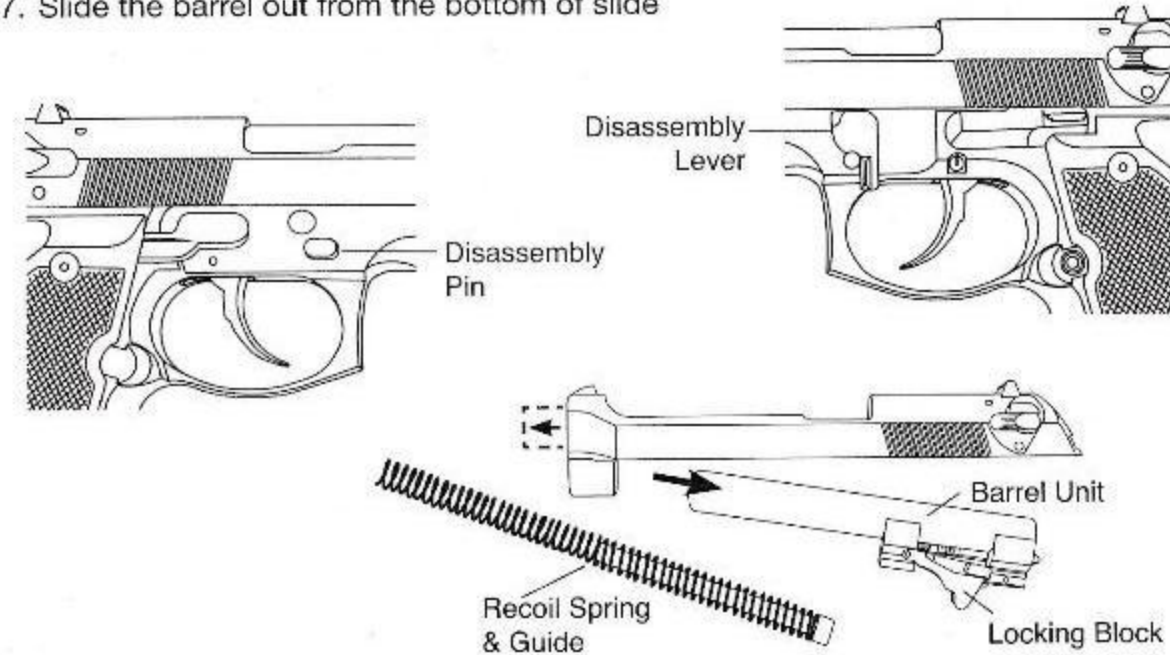

ASSEMBLY

1. Place the barrel into the slide from underneath
2. Install the recoil spring and guide rod into position
3. Push the slide onto the frame rails and hold back
4. Swing the disassembly lever upward
5. Release the slide

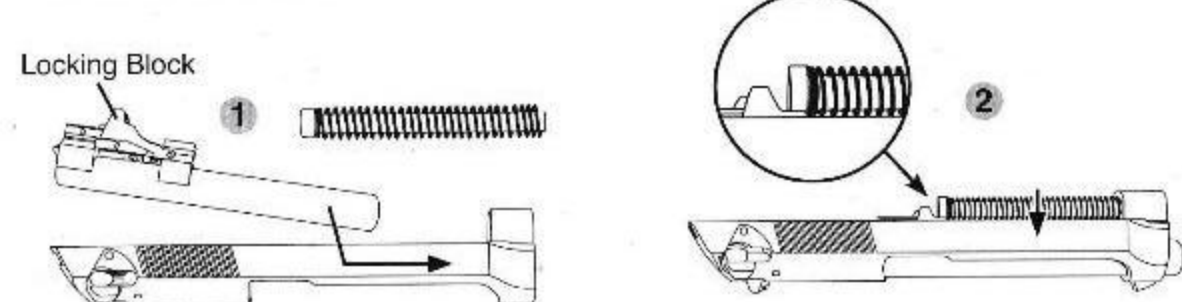

NOTE: After assembly is completed, cycle the slide back and forth to insure proper assembly.

4